**Address:** P.O. Box 461947 Garland, TX 75046 **Phone:** 972-494-1566 **Toll Free:** 1-800-889-5478

Website: www.thermosensors.com

A Leading Manufacturer of Quality Thermocouple and RTD Assemblies Since 1972

# **Thermowells**

Thermowells are used to provide an isolation between a temperature sensor and the environment, either liquid, gas or slurry. A thermowell allows the temperature sensor to be removed and replaced without compromising either the ambient region or the process.

Care must be taken in determining the material used for the thermowell as well as other factors. Thermo Sensors offers design assistance that includes pressure, temperature and or corrosion as well as vibration effects of the fluids. This vibration can cause well stem failure.



Thermo Sensors thermowell materials include:

- Carbon Steel
- 304 & 316 Stainless Steel
- Monel
- Brass

Please refer to our order guide to assist in determining your needs. We can also provide technical design assistance and application suggestions. Give us a call.

## **Limited Space / Weld-In Thermowells**

## **Limited Space Thermowells**

Limited space thermometer wells for 1/4" diameter stems with 2 1/2" stem lengths.

#### **Application**

Bimetal thermometers, thermocouples and RTD's with 1/4" diameter stems and 2 1/2" length.


#### **Thread Connections**

Standard wells have either a 3/4" or 1" NPT process connection and a 1/2" NPT internal thread. Other thread sizes are available.

#### Material

Thermometer wells are available in a wide selection of materials. <u>Click here</u> for material codes.

### Series 1H & 2H - Limited Space

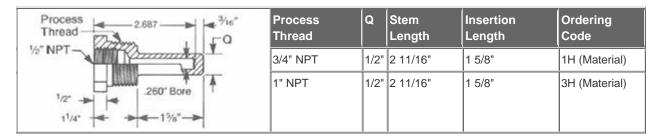


Thermo Sensors Corporation Copyright 2012 www.thermosensors.com

**Address:** P.O. Box 461947 Garland, TX 75046 **Phone:** 972-494-1566 **Toll Free:** 1-800-889-5478

Website: www.thermosensors.com

A Leading Manufacturer of Quality Thermocouple and RTD Assemblies Since 1972

#### **Weld-In Thermowells**

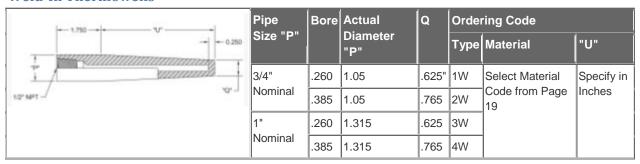

## How to Order:

- 1. Determine process thread required and specify the corresponding part number listed in the "ordering code" column.
- 2. Replace "(Mat'l.)" with desired material code. Material codes are here.